




1. Cut out the hole on the wall

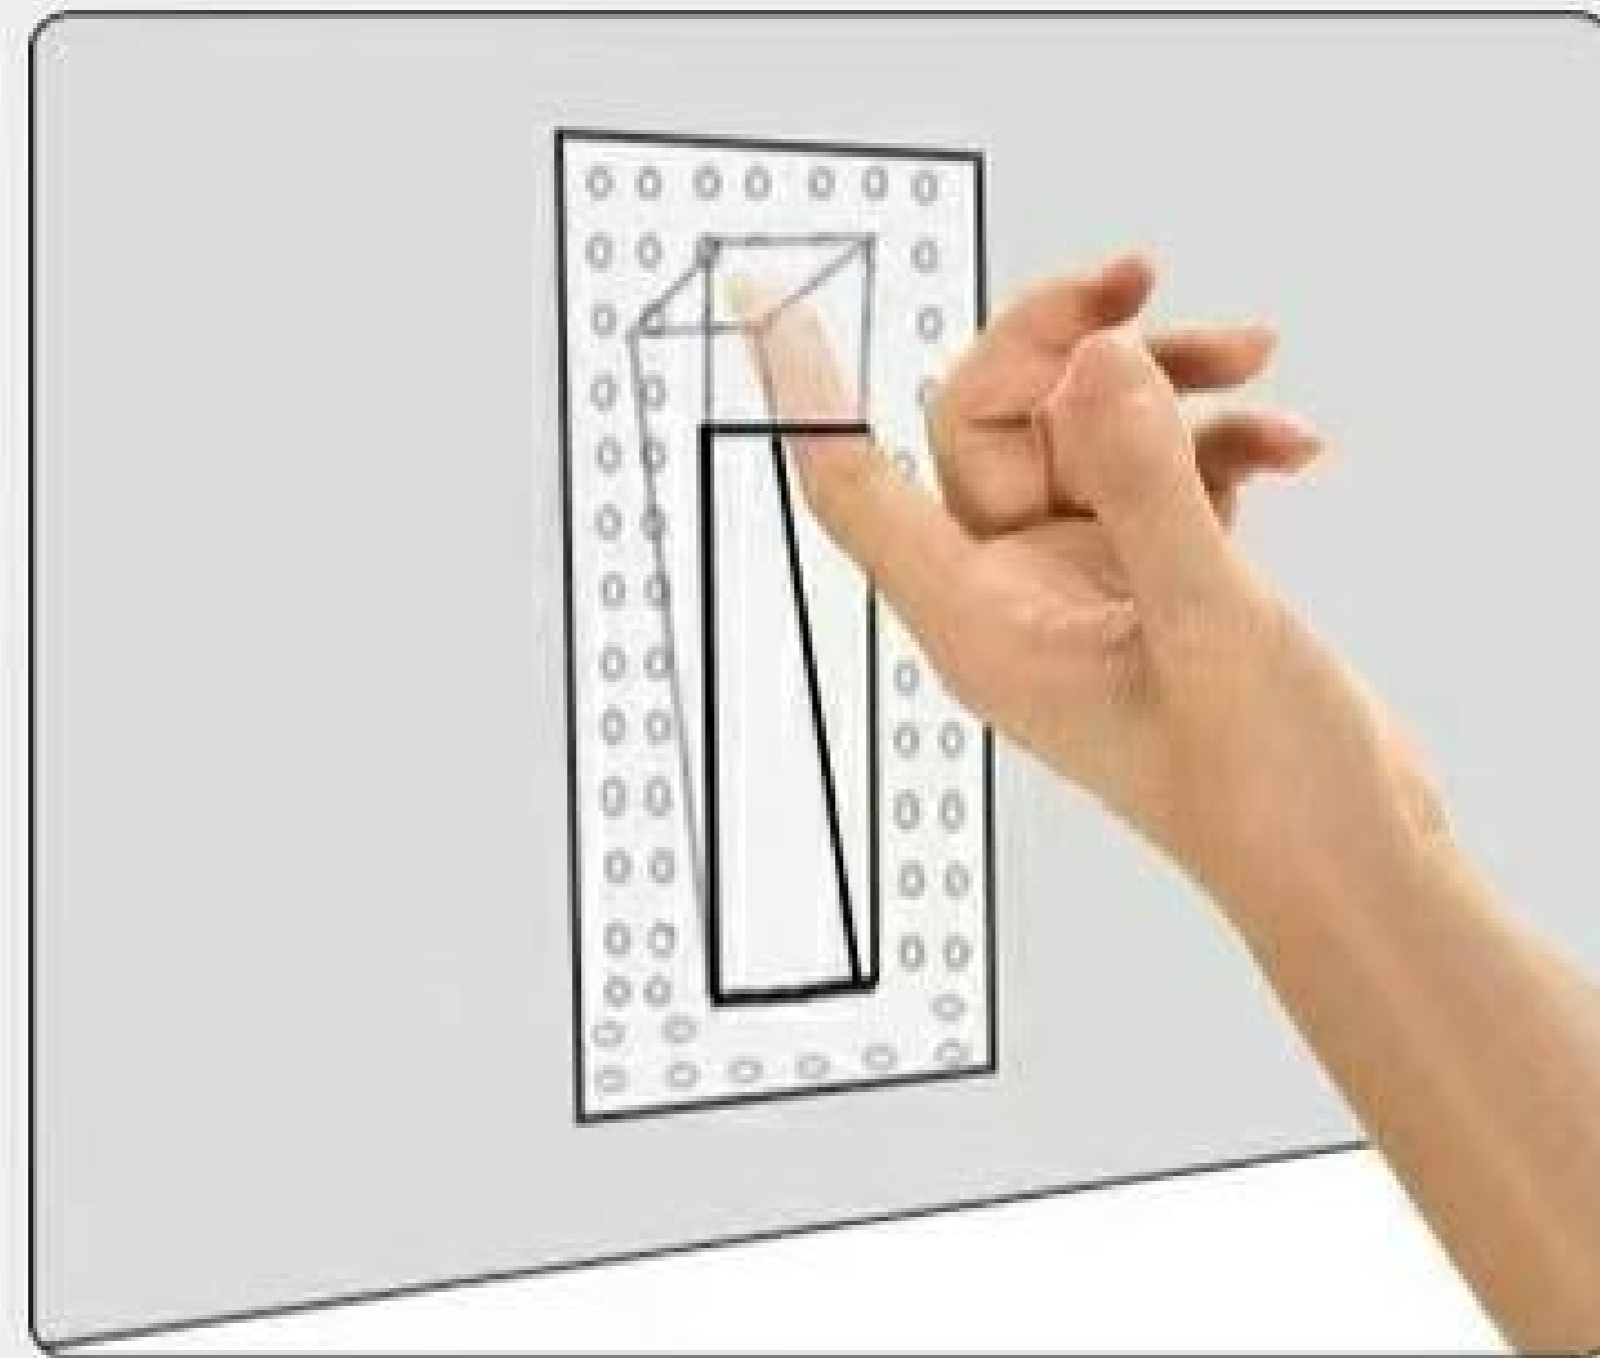

2. Fixed the trimless frame

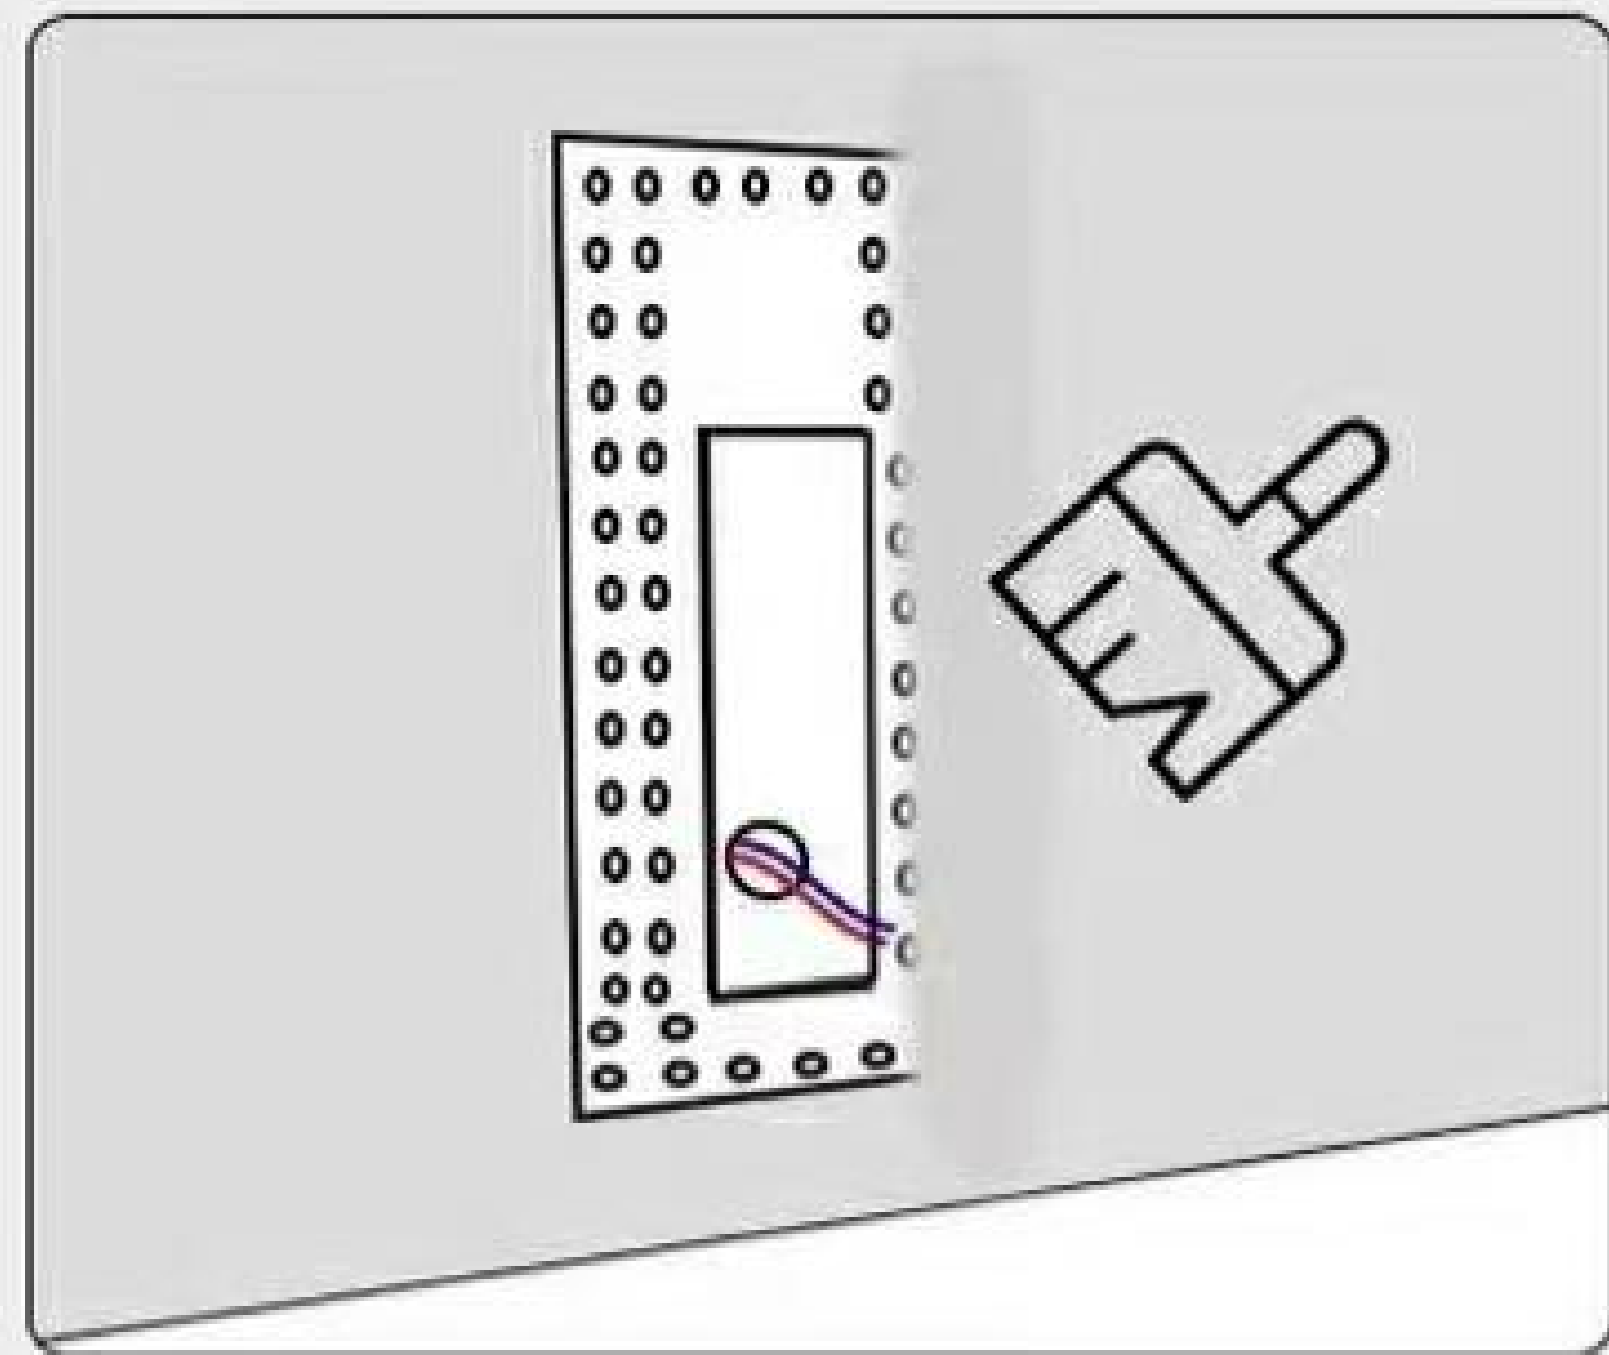

3. Composed by plaster

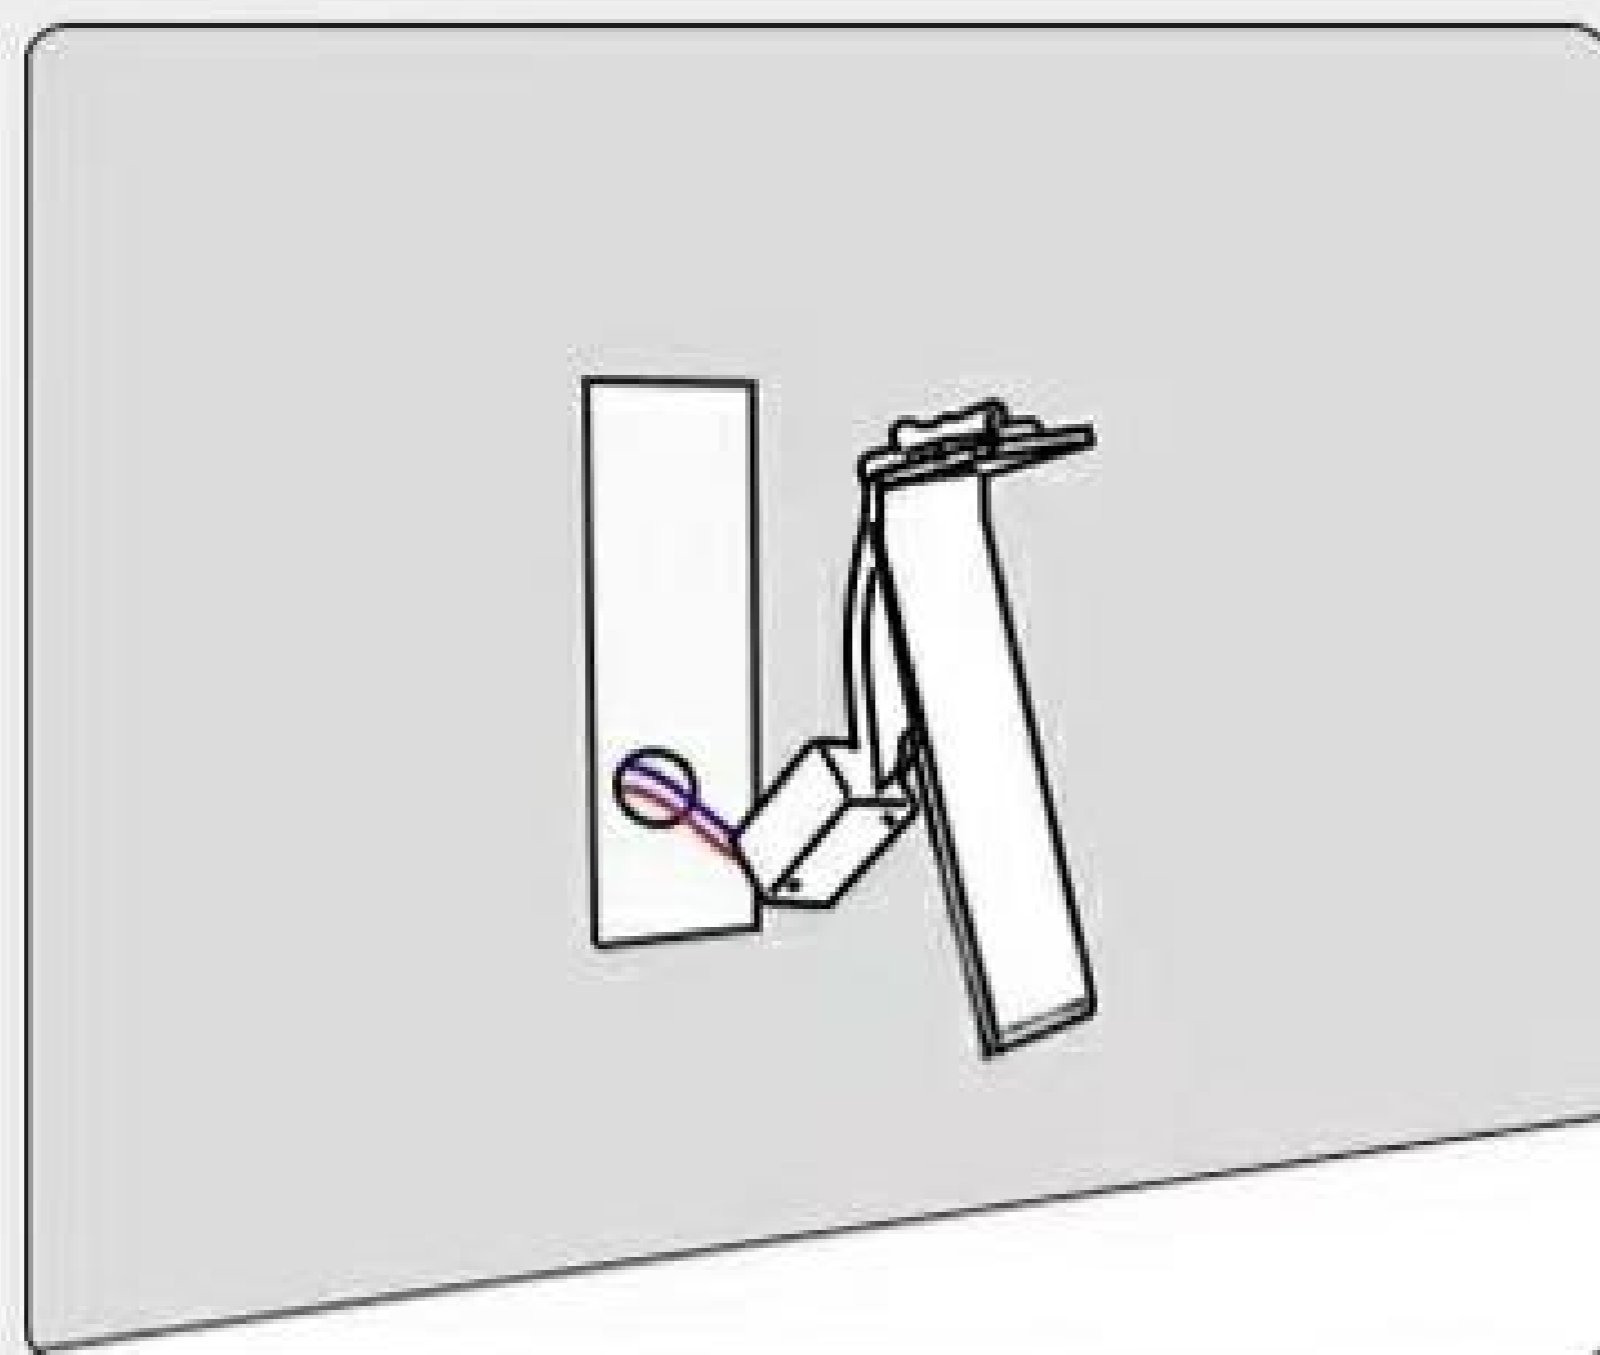

4. Connected the wire

